




Zoomer Jurassic World Indominus Rex Back Cover Replacement

This is a prerequisite guide that you need to do before doing other guides such as motherboard replacement and battery replacement.

Written By: Anh Le

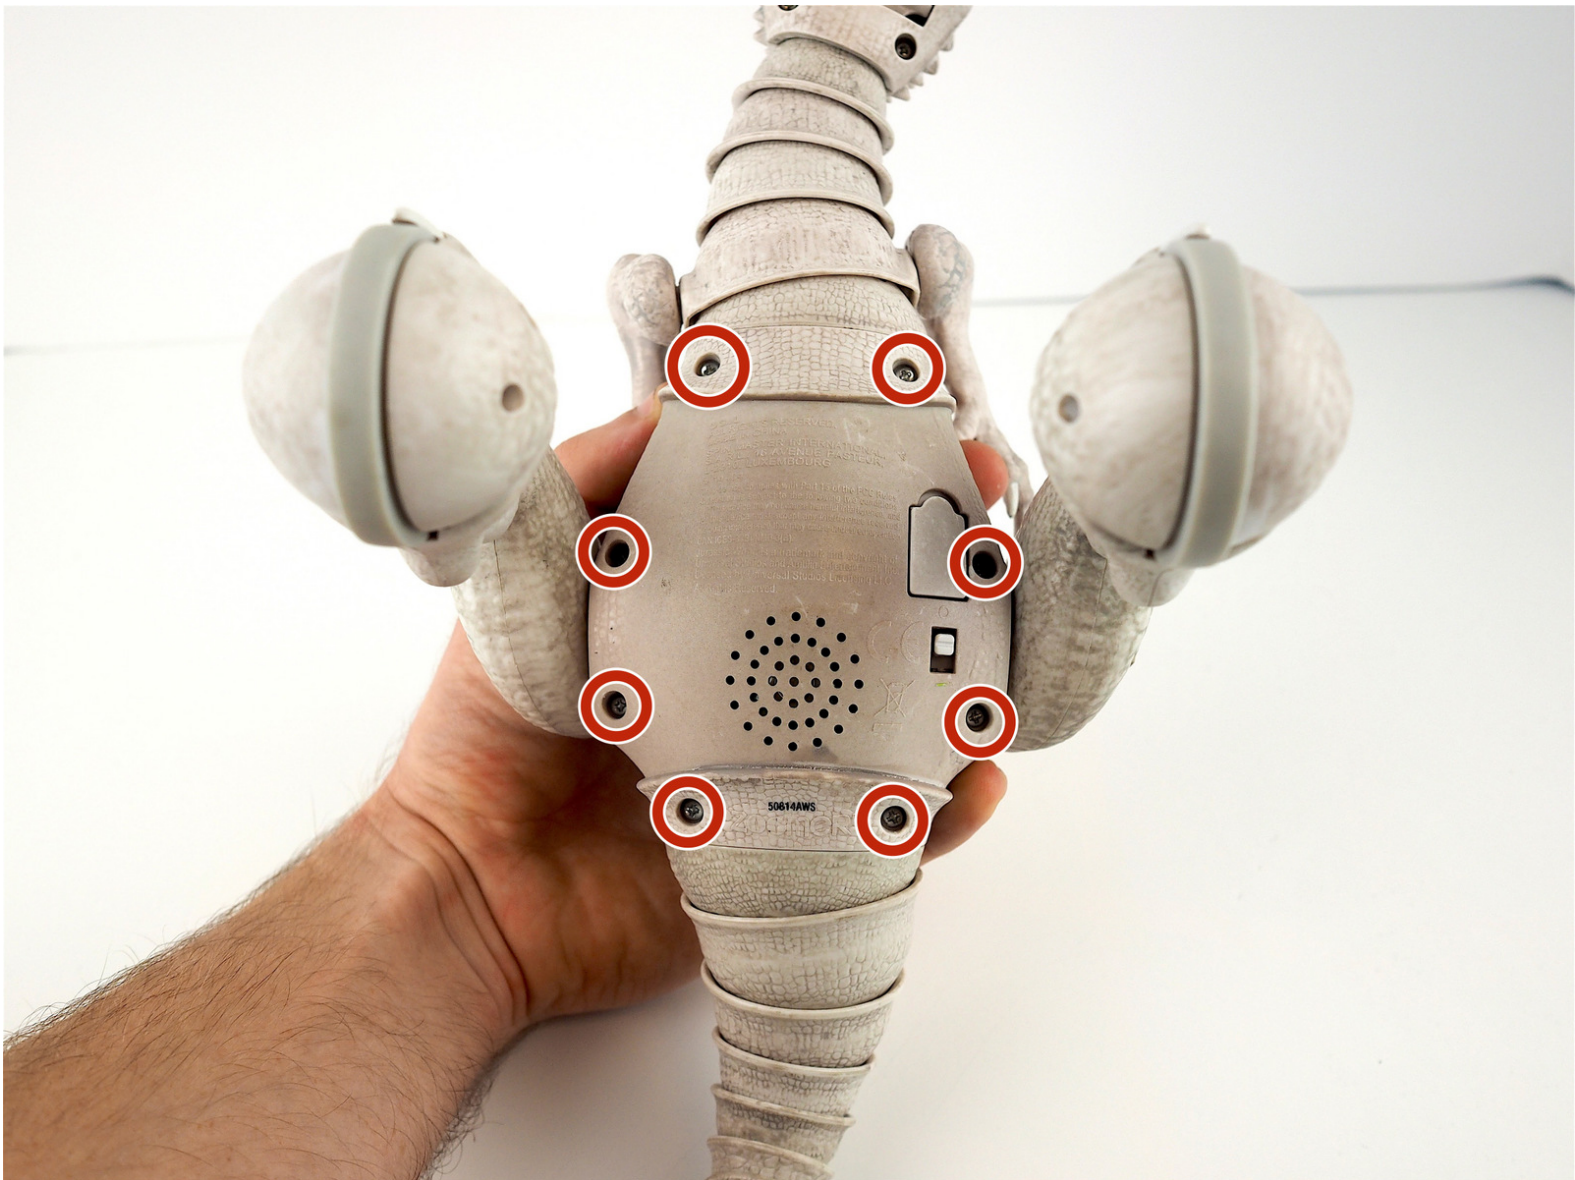

INTRODUCTION


Remove the back cover of the Zoomer Jurassic World Indominus Rex to get access to the motherboard, battery and the mechanical systems of the toy.



TOOLS:

- [Heavy-Duty Spudger](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-



Step 1 — Back Cover

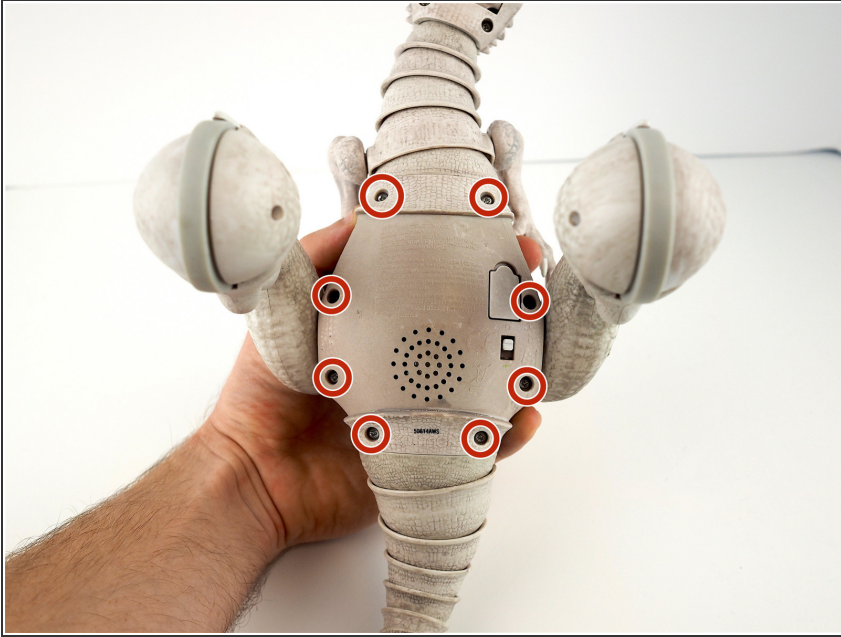

❗ Turn off and unplug Zoomer Jurassic World Indominus Rex from any power source before doing replacements.

- Remove all eight (8) 9.3mm Phillips screws using Phillips #1 screwdriver.


Step 2

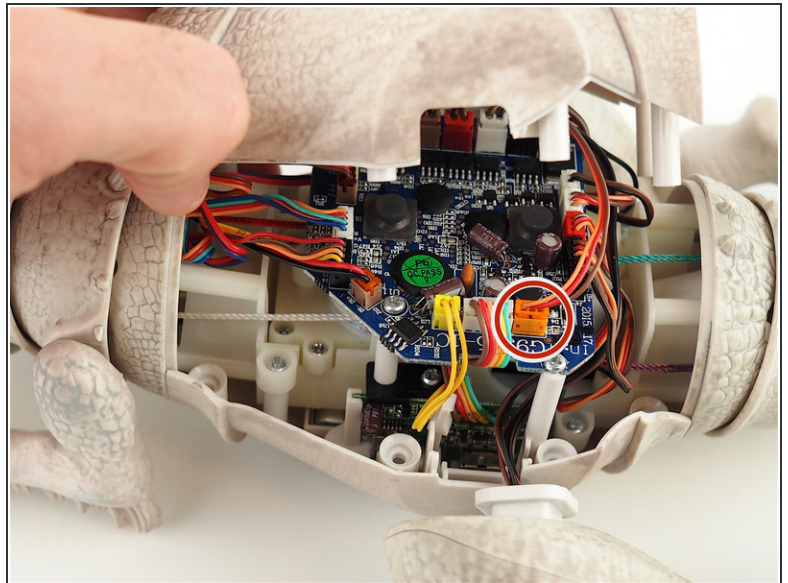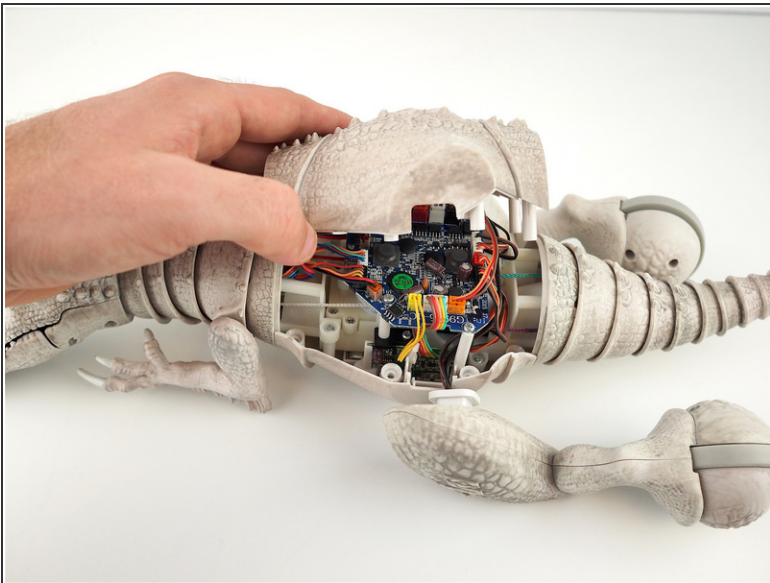

- Pry apart the back cover of the Jurassic Indominus Rex and the rest of the body using a spudger.

⚠ Do not take out the back cover immediately as it is still attached to the motherboard by a wire.

Step 3

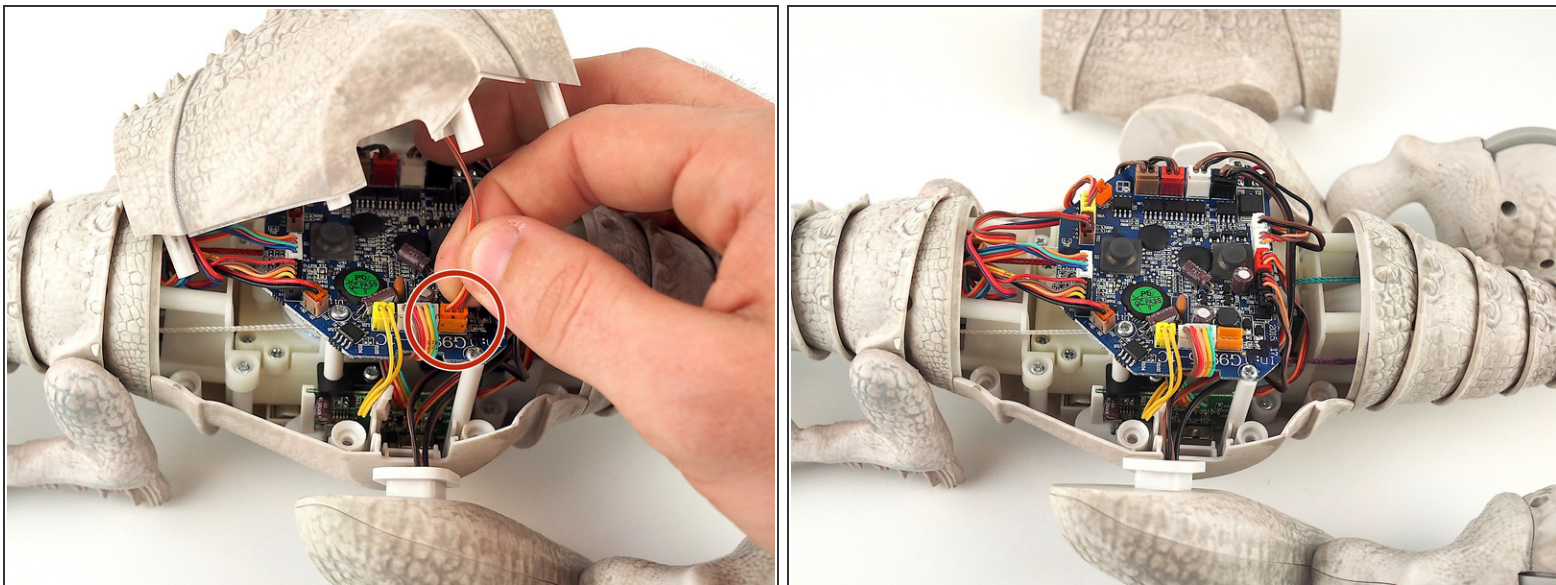

- Disconnect the orange wire that connects the motherboard and the back cover.
- Separate the back cover and the rest of the Zoomer Jurassic World Indominus Rex.
- ① Gently press the tab on the side of the orange connector if you are having trouble disconnecting the wire.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 06:34:26 AM.